

6 WATCH TV

Change the channel you are watching by entering the three-digit channel number using the number buttons on the remote control. Or, you can press the **P+** or **P-** buttons to step through the channels in order.

Press these buttons to turn the volume up and down. You can turn the sound off altogether with the **MUTE** button. The sound comes back on when you press **MUTE** again.

Many freesat programmes are broadcast with subtitles. You display the subtitles by pressing the **SUB** button, and turn them off by pressing **SUB** again.

When an audio description (a spoken description of the broadcast) is available, turn on with the **AD** button on the remote control, and turn it off by pressing **AD** again.

bar to show the programmes showing at different times.

Press OK to switch the receiver to the channel and programme highlighted by the orange bar. If the programme is on at the time, the receiver will switch to that channel immediately. If the programme is scheduled for later on, a reminder is set. When the programme is about to start, a message is displayed on screen and, after a few seconds, the receiver automatically switches to the necessary channel.



Digital text and interactive services are available from some freesat channels, and you can use them by pressing **TXT** or the **Red** button while watching the relevant channel. This displays a menu of services available from that channel or broadcaster.

When you have finished with the interactive services, return to watching TV by pressing **TXT** or **EXIT**.

Your receiver can be switched on and off by pressing the **Power** button. Leave the Plaza DS•100 plugged in at all times. It will automatically go into standby when it is not used for a long time.



 
You can find out the programmes scheduled to be shown on all the freesat channels up to eight days ahead using the **EPG** button. Press the button and then **OK**.

Browse the scheduled programmes using the **Up** and **Down** buttons to move through the channels, and the **Left** and **Right** buttons to move the orange highlight

This is a brief introduction to the features of your Plaza DS•100 receiver. More details are given in the user guide.

Manhattan

Plaza DS•100 Remote Control

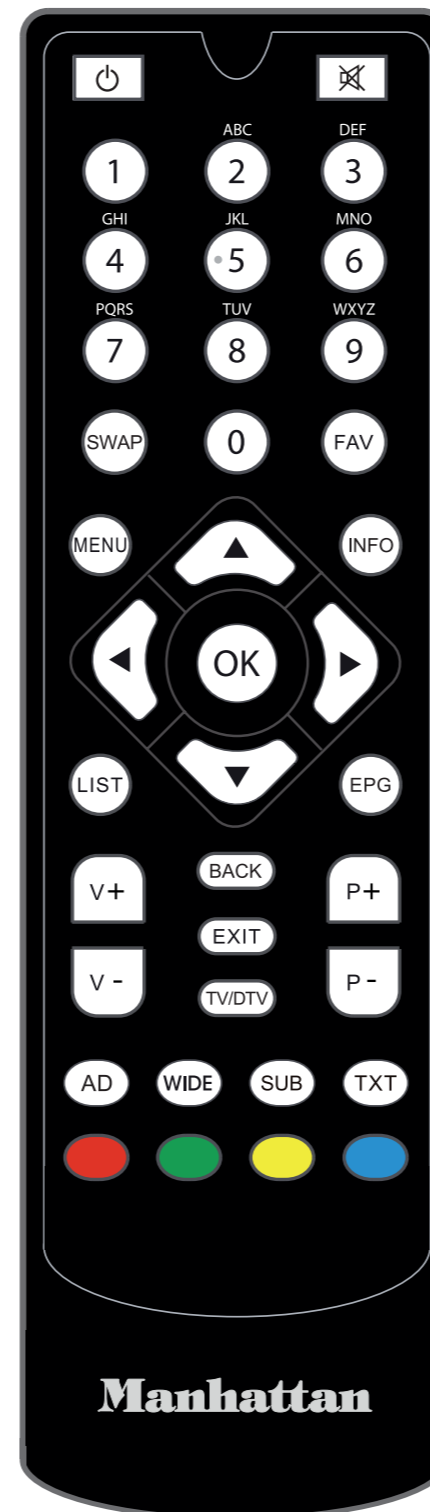

Power Standby - switches the receiver on and off.

Mute Mute - silences the receiver's sound.

0, 1... 9 - buttons to choose channels and so on, and to enter your postcode.

SWAP Switches to the last channel watched and switches between freesat and non-freesat channel lists.

FAV Switches to the next channel in the favourite channels list.

MENU Displays (and exit) the main menu screen.

INFO Displays channel and programme information.

Up, down, left, right - moves the highlight bar in menus and in the EPG. Allows you to browse the channels and programmes.

OK Chooses the option in the menu.

LIST Displays the channel list.

EPG Displays the electronic programme guide (EPG).

BACK Exits a menu and returns to the main menu.

EXIT Exits a menu and returns to normal TV viewing.

TV/DTV Switches between freesat and the TV's tuner.

V+ Turns the volume up and **V-** down.

P+ Switches to the next or **P-** previous channel. Moves one page up or down the channel list.

AD Switches audio description on and off.

WIDE Switches between widescreen display formats on a conventional TV.

SUB Switches subtitles on and off.

TXT Displays the interactive and digital text services (where available).

Red, Green, Yellow, Blue Chooses options within menus.

Manhattan

freesat SD

Quick Start Guide

How to set up and use your
Plaza DS•100
freesat digital TV receiver

UNPACK

Unpack and check the contents of your Manhattan Plaza DS•100 freesat receiver pack.

The pack should contain the following.

 
- Plaza DS•100 receiver
- Remote control
- Batteries for the remote control
- Scart lead to connect to the TV
- Quick start guide
- User guide



2 CONNECT TO A DISH

To receive freesat you must connect your Plaza DS•100 receiver to an appropriate satellite dish, fixed in position and accurately pointed at 28.2° east.

For safety reasons and to provide reliable reception, we strongly recommend that the dish is professionally installed. If you have any questions about the dish, please consult your installer.

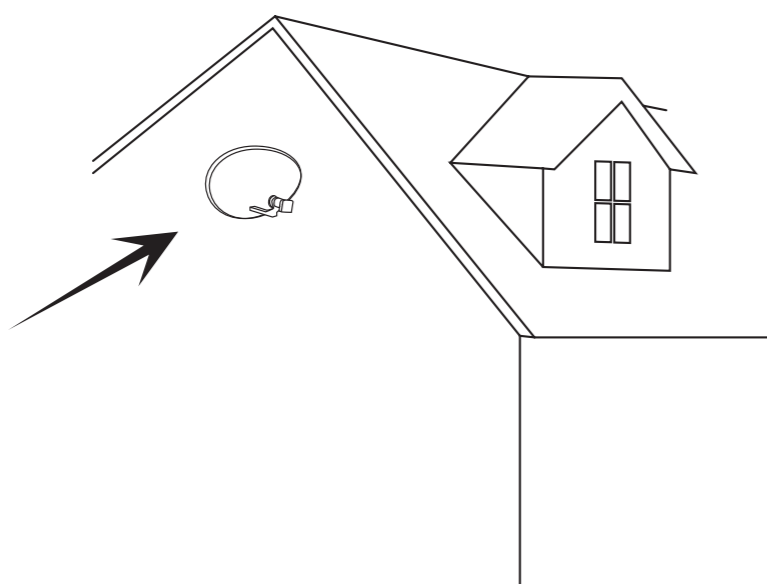


3 PLUG IN

Place your Plaza DS•100 receiver on a firm, level surface close to your television, a mains electricity socket, and the cable from the dish.

Connect the cable from your dish to the LNB IN socket at the back of the receiver.

 Make sure your television is turned off and connect the SCART cable to the TV SCART socket on the back of the Plaza DS•100 and to a SCART socket on your television (usually labelled AV). If you need more guidance, check your television manual.

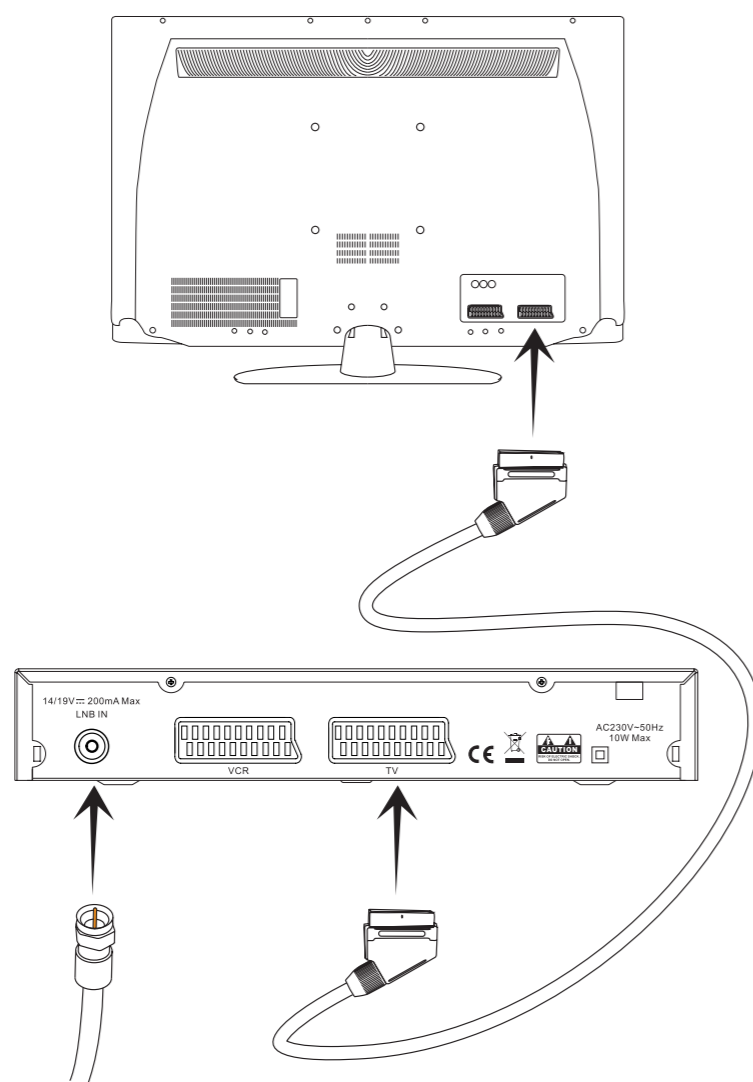




4 SWITCH ON

Remove the battery compartment cover from the back of the Plaza DS•100 remote control by lifting it up while pushing the catch. Insert the two AAA batteries as marked on the inside of the compartment. Replace the compartment cover.

Turn on your TV set and choose the SCART input (see your television's user guide).

Plug the receiver in and switch on. After a few seconds, the receiver's first set-up screen will be shown on the television screen.

   If you do not see this screen, or if the signal strength displayed is below 50%, see the **Troubleshooting** section in the User guide.

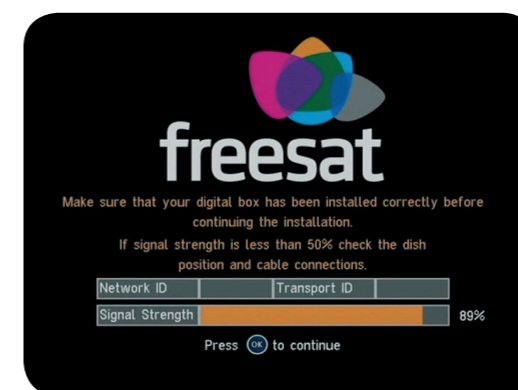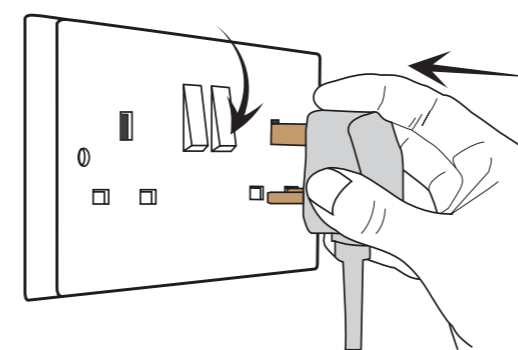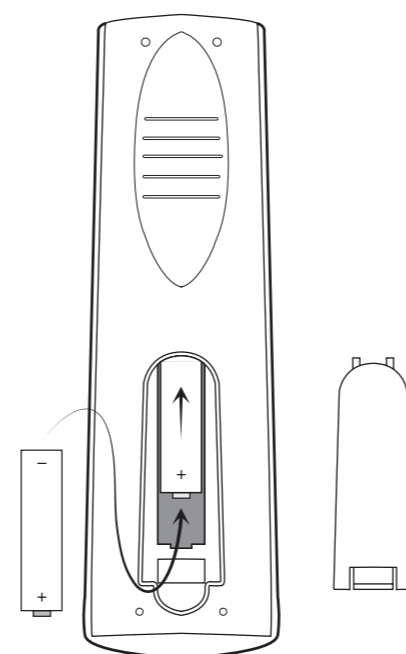

5 TUNE IN

When the set-up screen is displayed, press the **OK** button on the remote control to start the tuning process. After a few seconds, when the receiver has displayed the 'Network ID' and 'Transport ID' values on the screen, press the **OK** button again to display the postcode screen.

Enter your postcode, pressing the number buttons an appropriate number of times to produce the letters (printed above each button) and numbers required, in the same way as 'texting' on a mobile phone. You do not need to enter a space. If you make a mistake, the **Left Arrow** button deletes the previous character. Now press the **OK** button to confirm the postcode and to choose your television type.

Use the **Right Arrow** or **Left Arrow** buttons to choose the type of television (widescreen 16:9 TV or squarer 4:3 TV) and press **OK** to start the channel search.

Your Plaza DS•100 receiver will take a few seconds to find and store the freesat channels available, and then briefly display the total number of freesat TV and radio channels found.

Your Plaza DS•100 receiver is now ready for you to watch freesat digital TV.

