

Manhattan
AERO

Quick Start Guide



Unpack Your Giftbox



REMOTE CONTROL




MANHATTAN AERO



2 x AAA BATTERIES




POWER ADAPTER

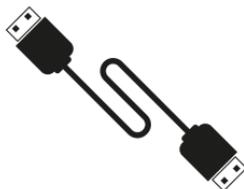

HDMI CABLE

Switch On & Set Up

- Connect one end of an HDMI cable to the **HDMI** port on your Aero, then connect the other end to the HDMI port on your TV.
- Connect the lead from the power adapter to the **POWER** port (marked with a red box) on your Aero. The top pin on the plug folds flat for packaging – lift it up, then plug into a power socket.
- Insert the batteries into your Aero remote.
- Turn on your TV, then select the HDMI input that's connected to your Aero if it's not already selected.
- Use the remote to follow the on-screen instructions.

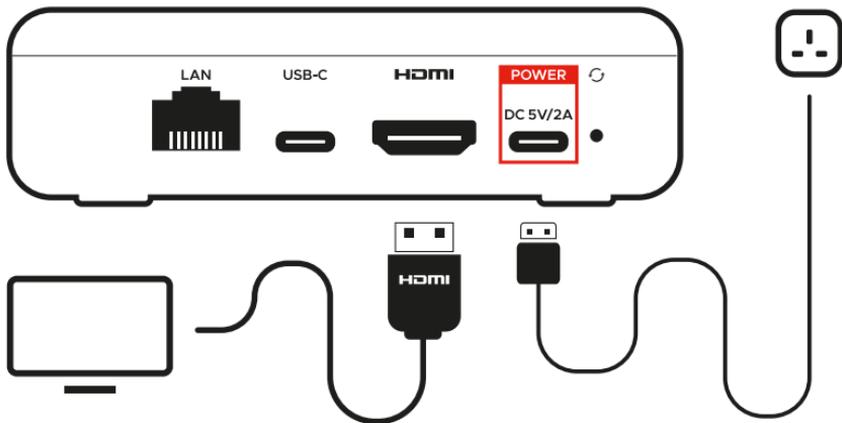

Getting Started

Now that your Aero is set up, here are the essentials to get you watching.

Using Freely

Freely gives you access to live TV, catch-up, and on-demand content from major UK broadcasters.

Accessing Freely

Your remote has two buttons for direct access to Freely:

- **Freely button:** Opens the Browse section, showing what's on now and on-demand picks
- **Guide button:** Opens the TV Guide with all live channels

Freely is organised into four tabs at the top of the screen:

- **Browse:** Live TV carousel, on-demand recommendations, and content by channel and genre
- **TV Guide:** View what's on now and browse up to 7 days ahead
- **Search:** Find shows across all Freely content
- **Settings:** Manage your Freely preferences

The MiniGuide

While watching live TV, press **OK** or any direction on the **D-pad** to open the MiniGuide. This shows what's on next, programme information, and more episodes. You can also toggle subtitles (**S**) and audio description (**AD**) from here.

Quick Navigation Tips

- Press  repeatedly to move back through menu levels
- Hold down  briefly to quickly exit any Freely menu to live TV

TiVo Home Screen

Press  to open the Home screen – your hub for streaming apps and content.

Scroll up and down between rows, and left and right within each row. You'll find Live TV channels, personalised recommendations, and your apps in My Apps (which you can customise). Press **left** for the sidebar menu with **Search**, **Watchlist**, **All Apps**, **Settings**, and more.

The Home screen learns from your viewing and gets better over time. Help personalise it by rating content with **Thumbs Up** or **Thumbs Down**, and use your **Watchlist** to save things for later.

Using the Voice Remote

The  button lets you use your voice to search and control your Aero. Press and hold the button while speaking, then release when finished.

Speak naturally and conversationally – TiVo understands natural language. After your first command, you can press and hold again to add more search terms and refine your results without starting over.

Try commands like:

- **Search:** "Show me action movies" or "Films like Paddington"
- **Refine Searches:** "Show me James Bond movies", then "just the ones with Daniel Craig"
- **Navigate:** "Go to Settings" or "Open iPlayer"
- **Control:** "Volume up", "Mute on", or "Set volume to 50"
- **Playback:** "Fast forward 5 minutes" or "Pause"

Note: Your remote must be paired for voice to work. You'll be prompted to pair during initial setup, or go to **Settings** → **Devices** → **Remote Control**. Voice commands work best on the Home screen and currently have limited support in apps.

Voice, Search, and Personalised Recommendations ('Powered by TiVo Functionality') is only available when you are connected to the internet, on compatible devices, and in certain countries where consent to its installation is needed, or your viewing device will not provide the Powered by TiVo Functionality. Please see tivo.com for more info and any updates.

**Register within 30 days of purchase
to activate your extended**

2 YEAR WARRANTY

manhattan-tv.com/register

Your serial number is needed for registration and can be found on the label underneath the Aero and on the side of the gift box.



**Need help with your
Manhattan Aero?**

manhattan-tv.com/help/aero

Find detailed guides and troubleshooting tips, or contact us via our support form.

Or call: 0208 450 0005 (Mon - Fri, 9am - 5:30pm)



Important Information

Safety Warnings

⚠ WARNING: To avoid injury, read all safety information below before using the Manhattan Aero. Please heed all warnings and keep these instructions. Failure to follow these safety instructions could result in fire, electric shock or other injury or damage to the Aero or other property.

Power. Only use the power adapter included with your Manhattan Aero (Model: TPA-185C050200BW01, 5V DC 2A). First, connect the USB-C cable to the Aero, then connect the power adapter to an electrical outlet with a 100V - 240V AC, 50/60Hz supply.

⚠ WARNING: Only use the supplied power adapter or a USB-C power adapter that provides 5V DC at 2A or higher and is compliant with IEC/EN 62368-1. Using an underpowered power adapter may cause the Aero to malfunction.

The mains plug is used as the disconnection device. Make sure it is easily accessible to quickly disconnect the Aero from the electricity supply when needed. The Aero has no on/off switch. To disconnect the Aero from power, switch off the mains socket it is connected to, and then unplug the mains plug. When connecting or disconnecting the mains plug, always hold it by its sides and keep fingers away from the metal part of the plug.

Cables. Position all cables to avoid being walked on, crushed or damaged by things placed on or against them. Pay particular attention to the USB-C cable where it connects to the Manhattan Aero and the power cable where it exits the power adapter. Always disconnect the Aero as described above before connecting or disconnecting cables from it

Repair & Service. **⚠ WARNING:** Do not attempt to open the Manhattan Aero or disassemble it. You run the risk of electric shock, and damage caused by disassembly is not covered by the limited warranty. No user-serviceable parts are inside.

Make sure that anyone who services your Aero is qualified to do so. Make sure the person carrying out the repair uses parts which are specified by us or which have the same specifications as the original part. Other parts may cause a fire, electric shock or other dangers.

If the power adapter breaks or becomes damaged, do not use it. Do not cut or open the power adapter, as this will expose you to dangerous high voltages present inside. The power adapter is non-serviceable and does not have any replaceable parts inside. If the power adapter is damaged,

it must be replaced by the manufacturer, its service agent, or suitably qualified persons in order to avoid a hazard.

Hazards to Children. ⚠️ **WARNING:** Keep AAA batteries and small accessories away from young children (choking hazard). Do not place the Aero within reach of young children or on an unstable surface. Pulling on cables can cause it to fall. Cables can present a strangulation hazard.

Batteries. The Manhattan Aero remote control takes two AAA batteries. Always replace dead batteries with two brand-new batteries from the same manufacturer. Do not mix old and new batteries or different battery types (e.g. alkaline and manganese batteries). Never use damaged batteries. Do not expose batteries to excessive heat such as sunshine, fire or the like. Remove batteries from the remote control when not using for a prolonged period of time to prevent battery leakage, corrosion and explosion.

Proper Handling and Usage

Location & Environment. Place the Aero on a hard, stable surface. Do not cover the product (e.g., with cloths or inside tight enclosures), and do not stack other equipment on top. Do not place the Aero on soft furnishings or carpets. The Manhattan Aero is an indoor product; do not use it outdoors. Do not use the Aero near water. Do not expose it to dripping or splashing, and do not place any object filled with liquid, such as a vase, on or near the Aero. Do not place naked flame sources, such as lit candles, on or near the Aero. If there is a storm or lightning, unplug the Aero.

The Aero is designed for use in ambient temperatures between 0° and 35° C and humidity levels of 20% to 80% RH (non-condensing). It should be stored at temperatures between -20° and 45° C. The case may become warm during normal operation as it dissipates internal heat, which is normal. Do not expose the Aero to extreme temperature changes or high humidity, as this can cause condensation.

Cleaning and Care. Disconnect power and cables before cleaning. Wipe with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents. If liquid or a foreign object enters the unit, disconnect it and contact Manhattan support.

Disposal and Recycling Information. The symbol on the right means that according to local laws and regulations, your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of



your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

EU/UK Compliance



Declarations of Conformity. Hereby, Manhattan TV Limited declares that the radio equipment type Manhattan Aero is in compliance with EU Directive 2014/53/EU and UK Radio Equipment Regulations 2017.

UK PSTI Compliance. Hereby, Manhattan TV Limited, declares that this product complies with the applicable security requirements in Schedule 1 of the Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023.

Compliance Information. Full declarations of conformity, UK PSTI statement, and ecodesign (energy performance) specifications are available at: <https://manhattan-tv.com/compliance>

Wireless Frequencies & Output Power. The table below details the maximum radio-frequency output of the Manhattan Aero's Wi-Fi across different frequency bands and standards. This device is restricted to indoor use only in 5.150 - 5.250 GHz.

Frequency	Maximum Power
2.4 GHz	< 100mW
5.150 – 5.250 GHz	< 200mW (indoor only)
5.725 – 5.875 GHz	< 25mW

Privacy

Manhattan does not collect data through the Aero. Third-party services present their own privacy policies during setup and use. See <https://www.manhattan-tv.com/privacy> for details.

Manhattan Limited Warranty Summary

Subject to the full warranty terms and detailed information on obtaining service available at

<https://manhattan-tv.com/warranty>, Manhattan warrants that the Hardware is free from defects in materials and/or workmanship when the Hardware is subjected to normal use for a period of one year from the date of purchase ("Warranty Period"). Manhattan does not warrant against normal wear and tear, nor damage caused by accident or abuse.

If you submit a valid claim under this warranty, Manhattan will either repair or replace the Hardware, to a functionally equivalent standard, at its own discretion. Any replacement Hardware will be covered by this warranty for the remainder of the original Warranty Period or for thirty days from the date that the replaced Hardware is delivered to the customer, whichever is longer. This Limited Warranty does not affect your statutory and other rights under legislation governing the sale of consumer goods. You will be required to furnish proof of purchase details when making a claim under this warranty.

For end users qualifying for the Limited Warranty, Manhattan offers to extend the Warranty Period to two years from the date of purchase if:

- within 30 days of purchase the purchaser completes the registration process at <https://manhattan-tv.com/register> ; and,
- the purchaser receives confirmation from Manhattan of the activation of the 2 year warranty.

Acknowledgements

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

 Dolby Audio

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

 HDMI®

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM VIA LICENSING ALLIANCE LLC. SEE [HTTP://WWW.VIA-LA.COM](http://www.via-la.com)

© 2025 Manhattan TV Limited. Manhattan is a registered trademark of Manhattan TV Limited. © 2025 Xperi Inc. All Rights Reserved. TiVo and the TiVo logo are trademark(s) or registered trademark(s) of Xperi Inc. or its subsidiaries in the United States and other countries. All other trademarks and content are the property of their respective owners. v1.1 2025-11-26.