

6 WATCH TV

Change the channel you are watching by entering the three-digit channel number using the number buttons on the remote control. Or, you can press the **P+** or **P-** buttons to step through the channels in order.

Press the **V+** and **V-** buttons to turn the volume up or down. You can turn off the sound altogether with the **MUTE** button. The sound comes back on when you press **MUTE** again.

When subtitles are available for a programme it is indicated by a **SUB** symbol in the browsing bar at the bottom of the screen when you switch channels (press 'i' at anytime whilst watching TV to display the bar). Press the **SUB** button to display the subtitles menu and use the **UP** and **DOWN** buttons to move the orange highlight bar to "English" if you want to turn on subtitles, or "Off" to turn off subtitles, and then press **OK**.

If audio description (a spoken description of the broadcast) is available for a programme it is indicated by an **AD** symbol in the browsing bar. To turn on audio description, press the **AD** button to display the available audio menu and then select "English Audio Description (MPEG)".

Browse the scheduled programmes using the **UP** and **DOWN** buttons to move through the channels and the **LEFT** and **RIGHT** buttons to move the orange highlight bar to show the programmes showing at different times.

Press **OK** to switch to the programme highlighted by the orange bar. If the programme is on at the time, the receiver will switch to that channel immediately. If the programme is scheduled for later on, a reminder is set. When the programme is about to start, a message is displayed on screen and, after a few seconds, the receiver automatically switches to the necessary channel.

When you have finished with the programme guide, return to normal TV viewing by pressing **EXIT**.



You can find out the programmes scheduled to be shown on all the freesat channels up to eight days ahead using the **GUIDE** button. Press the button and then press **OK**.

Digital text and interactive services are available from some freesat channels, and you can use them by following the on-screen prompts and pressing **TXT** or the **RED** button while watching the channel. This displays a menu of services available from that channel or broadcaster.

When you have finished with the interactive services, return to normal TV viewing by pressing **TXT** or **EXIT**.

Switch off your receiver by pressing the **POWER** button, and press the button again to turn it on.

Manhattan

Plaza HD•S Remote Control

POWER Standby - switches the receiver on and off.

MUTE Mute - silences the receiver's sound.

1-9 0, 1... 9 - buttons to directly select channels, enter numeric value in the set-up menus and to enter your postcode.

RECALL Switches back to the last channel watched.

FAV Displays your favourite channels lists.

MENU Displays the main menu screen.


INFO Displays channel and programme information.

UP, DOWN, LEFT, RIGHT Up, down, left, right - move the highlight bar in menus and in the programme guide, and allow you to browse the channels and programmes.

OK Selects the option in a menu.

LIST Displays the channel list.

GUIDE Displays the programme guide.

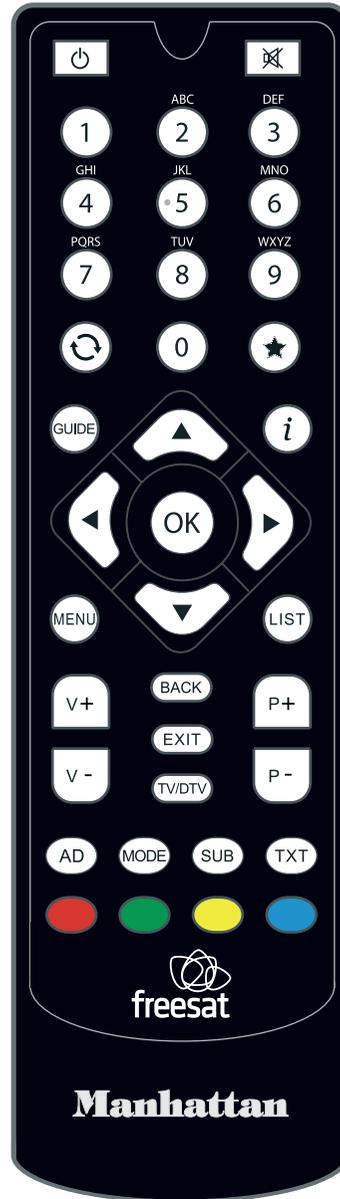

BACK Exits a menu and returns to the main menu.

EXIT Exits a menu and returns to normal TV viewing.

TV/DTV Switches the TV SCART output between freesat and the TV's tuner.

V+ **V-** Turns the volume up and down.

P+ **P-** Switches to the next or previous channel. Moves one page up or down in the channel list.

AD Displays the available audio menu to choose between normal sound and audio description.

MODE Switches between available screen display modes.

SUB Displays the subtitles menu to select a subtitle type.

TXT Displays interactive and digital text services (where available).

RED, GREEN, YELLOW, BLUE Chooses options within menus.

Manhattan


freesat HD

Quick Start Guide Plaza HD•S

Welcome to your new freesat HD digital TV receiver.

1 UNPACK

Unpack and check the contents of your Manhattan Plaza HD•S freesat receiver pack:

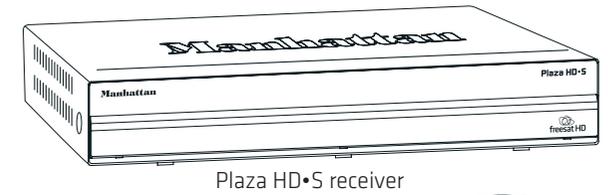

Find out more about freesat at www.freesat.co.uk


Follow freesat on www.twitter.com/freesat_TV

Like freesat on www.facebook.com/freesat

2 CONNECT TO A DISH

To receive freesat you must connect your Plaza HD•S receiver to an appropriate satellite dish, fixed in position and accurately pointed at 28.2° East satellite position.

For safety reasons and to provide reliable reception, we strongly recommend that the dish is professionally installed. If you have any questions about the dish, please consult your installer.

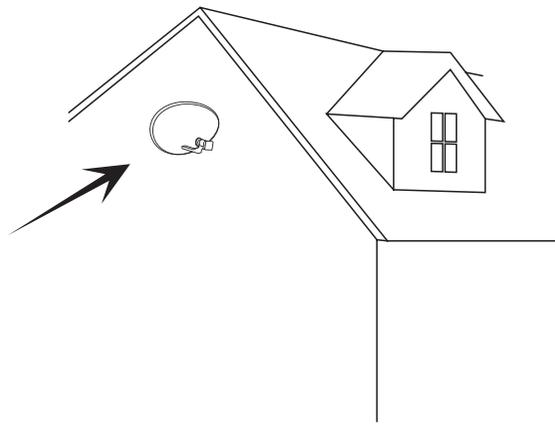


3 PLUG IN

Place your Plaza HD•S receiver on a firm, level surface close to your television, a mains electricity socket, and the cable from the dish.

Connect the cable from your dish to the LNB IN socket at the back of the receiver.

Make sure your television is turned off and connect the HDMI cable to the HDMI socket on the rear of the Plaza HD•S and to an HDMI socket on your television. If you need more guidance, check your television manual.


Plug the power supply lead into the POWER socket at the back of the receiver and then plug the power supply into an available mains socket that is turned off.

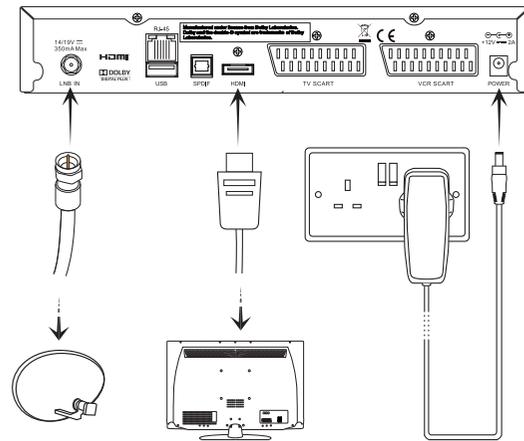


4 SWITCH ON

Remove the battery compartment cover from the back of the Plaza HD•S remote control by lifting it up while pushing the catch. Insert the two AAA sized batteries as marked on the inside of the compartment. Replace the compartment cover.

Turn on your TV set and choose the HDMI input (see your television manual).

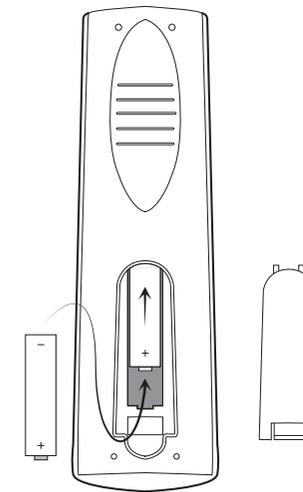

Switch on the mains socket the Plaza HD•S is connected to. After a few seconds, step one of the freesat installation process will be shown on the television screen.

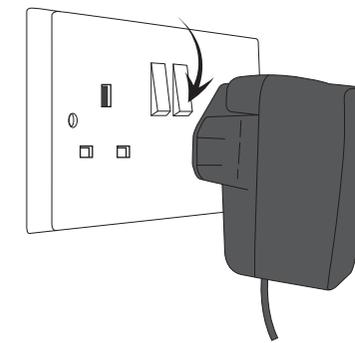

If you do not see this screen (pictured opposite), please refer to the Troubleshooting section in the main user guide.



5 TUNE IN

When the first installation step is displayed, use the left and right buttons to select the screen type of your television (16:9 Widescreen or the squarer 4:3 Traditional). Press the down button to highlight the HDMI Resolution selection box, and then use the left and right buttons to select the correct resolution for your television (see your television's manual for guidance, or select 720p if unsure).

Press the down button to select "Next" and then press the OK button to display the next installation step.

If the signal check screen displays signal strength or quality below 50%, see the Troubleshooting section in the main user guide. Press the OK button to proceed to the next step.

Enter your postcode, pressing the number buttons an appropriate number of times to produce the letters (printed above each button) and numbers required, in the same way as 'texting' on a mobile phone. You do not need to enter a space. If you make a mistake, the left button deletes the previous character. Now press the OK button once to confirm the postcode and again to start the channel scan.

Your Plaza HD•S receiver will take a couple of minutes to find and store the freesat channels available, displaying the total number of freesat TV and radio channels found. Press the OK button to display the next installation step.

Enter your choice of PIN (used to lock certain channels and functions) by pressing the required number button (0, 1 ... 9) for each of the four PIN digits. Press the OK button to proceed to the next step.

Setup is now complete. Your PIN number will be displayed on-screen along with reminder to make a note of it. When ready, press the OK button and enjoy watching freesat digital TV.

