


# Quick Start Guide

## Plaza HD-T2

Freeview HD Receiver with Apps

### 1 UNPACK

Unpack and check the contents of your **Manhattan Plaza HD-T2** pack:

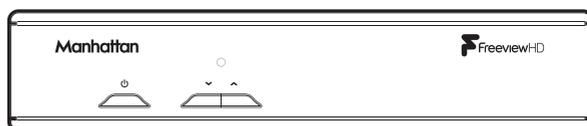

Plaza HD-T2 receiver



Quick Start Guide



Main User Guide



Batteries for the remote control



Remote control



HDMI cable to connect to an HD-ready TV


For assistance, please call the Manhattan helpline on 020 8450 0005 or visit our website at [www.manhattan-tv.com](http://www.manhattan-tv.com)



Check your coverage  
Check Freeview HD coverage in your area by visiting [freeview.co.uk](http://freeview.co.uk)

## 2 CONNECT TO AN AERIAL

To receive Freeview, you must connect your Plaza HD•T2 receiver to an appropriate TV aerial that has been correctly installed. If your aerial is unable to provide adequate signal, it may need to be realigned. Please consult a professional.

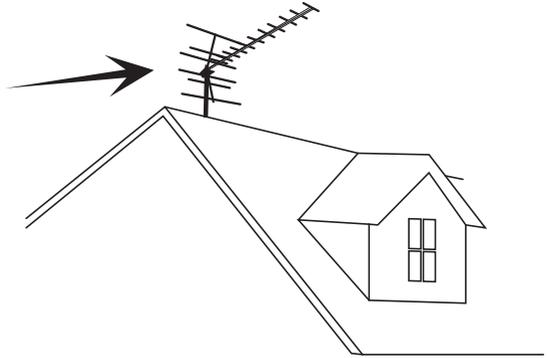


## 3 PLUG IN

Place your Plaza HD•T2 receiver on a firm, level surface close to your television, a mains electricity socket, and the cable from the TV aerial.

**Connect the cable** from your TV aerial to the ANT IN socket at the back of the receiver.

**Make sure your television is turned off** and connect the HDMI cable to the HDMI socket on the rear of the Plaza HD•T2 and to an HDMI socket on your television. If your television has no HDMI socket, then it must be connected to the receiver by SCART or RCA cable, and you will not be able to watch Freeview channels in high definition. If you need more guidance, check your television manual.


**Plug the mains power lead** from the back of the receiver into an available mains socket that is turned off.

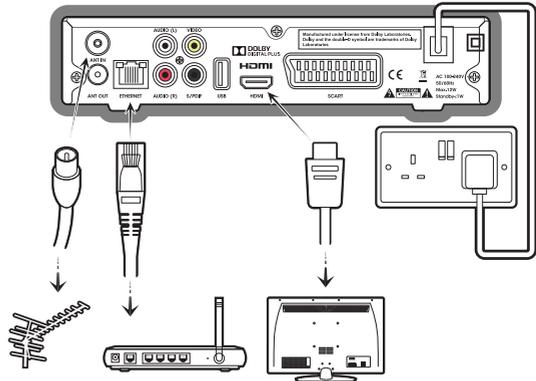

**To use Apps like BBC iPlayer or YouTube**, the Plaza HD•T2 must be connected to your internet router or hub using an ethernet cable (not supplied). Plug one end of the ethernet cable into the ETHERNET socket at the back of the Plaza HD•T2, and the other into your hub or router. Make sure the connections are fully pushed in - you'll hear a click as they lock into place. Consult your router or hub's documentation for further guidance.


# 4 SWITCH ON

**Remove the battery compartment cover** from the back of the Plaza HD•T2 remote control by lifting it up while pushing the catch. Insert the two AAA sized batteries as marked on the inside of the compartment. Replace the compartment cover.

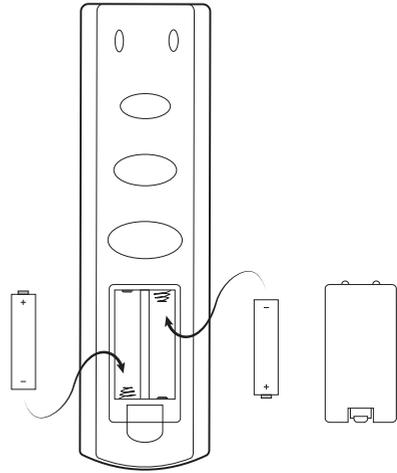

**Turn on your TV set** and choose the input you connected your Plaza HD•T2 to. If necessary, see your television manual for guidance.

**Switch on the mains socket** the Plaza HD•T2 is connected to. The power indicator light on the front will illuminate blue to indicate the receiver has been turned on successfully. After a few seconds, step one of the freesat installation process will be shown on the television screen.

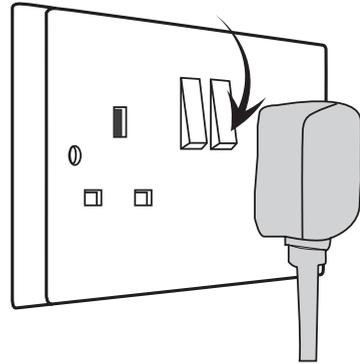

If you do not see this screen (pictured opposite), please refer to the **Troubleshooting** section in the main User Guide.



# 5 TUNE IN

When the first installation step is displayed, use the **◀** and **▶** buttons to select the screen type of your television (16:9 Widescreen or the squarer 4:3 Traditional). Press the **▼** button to highlight the HDMI Resolution selection box, and then use the **◀** and **▶** buttons to select the correct resolution for your television (see your television's manual for guidance, or select 720p if unsure).




Press **▼** to select “Next” and then press **OK** to display the next installation step.


If you don't see a picture because you selected an incompatible resolution, press **BACK** to return to the first step and select a different HDMI resolution. Your Plaza HD•T2 receiver will scan for channels, displaying the total number of TV, radio and data channels found. When the scan is complete, press the **OK** button to display the next installation step.



A PIN is required to enable and disable parental guidance, access locked channels or restore to factory default. Enter your choice of PIN by pressing the required number button **0, 1 ... 9** for each of the four PIN digits. Press **OK** to complete setup.

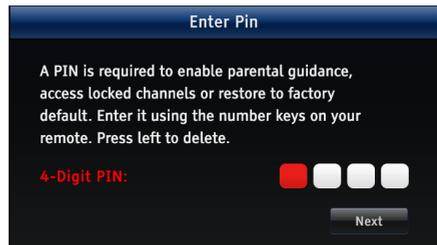

**Setup is now complete.** Your PIN number will be displayed on-screen along with a reminder to make a note of it. When ready, press **OK** and enjoy your Plaza HD•T2.

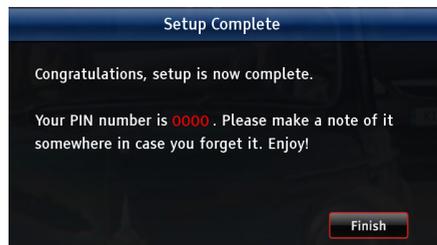


# 6 WATCH TV

Change the channel you are watching by entering the channel number using the number buttons on the remote control. Or, you can press the **P<sup>^</sup>** or **P<sup>v</sup>** buttons to step through the channels in order.

Press **V<sup>^</sup>** or **V<sup>v</sup>** to turn the volume up or down. You can mute and unmute the sound altogether with **⏸**. To view information about what is on whilst watching TV, press **i** to display the browsing bar. It is also displayed automatically when you change channels. Press **i** whilst the bar is displayed for a full description of the selected programme, or press **➤** to see what is on next. Press **^** or **v** to browse what is on other channels, and press **OK** to change channels.

When subtitles are available for a programme it is indicated by a **SUB** symbol in the browsing bar. To turn on subtitles, press the **SUB** button. To turn them off, press the **SUB** button again.

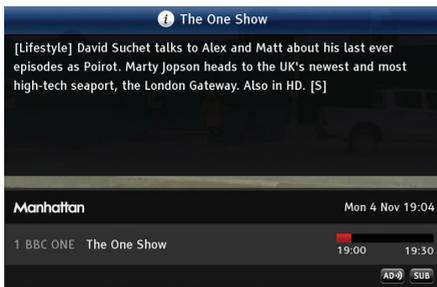

If audio description (a spoken description of the broadcast) is available for a programme it is indicated by an **AD** symbol in the browsing bar. To turn on audio description, press the **AD** button. To turn it off, press the **AD** button again.

For more information about the symbols displayed in the browsing bar, please refer to page 15 of the User Guide.



To find out the programmes scheduled to be shown up to eight days ahead, press **GUIDE** then **OK** to select the channels you want to view. Browse the scheduled programmes using **^** and **v** to move through the channels and **←** and **→** to show the programmes showing at different times.

Press **OK** to switch to the programme highlighted. If the programme is on at the time, the receiver will switch to that channel immediately. If the programme is scheduled for later on, a reminder is set. When the programme is about to start, a message is displayed on screen and, after a few seconds, the receiver automatically switches to the necessary channel.

To immediately return to watching TV from any menu, press **EXIT**.

Digital text and interactive services are available from some channels, and you can use them by following the on-screen prompts and pressing **TEXT** or the **■** button while watching the channel.

Switch off your receiver by pressing the **⏻** button, and press the button again to turn it on.


# 7 USE APPS

To use Apps, your Plaza HD•T2 must be connected to the Internet as described in section 3 “Plug In”.

YouTube can be opened at anytime by pressing the **YouTube** button on the remote control. To open other Apps, press the **APPS** or **GUIDE** button, highlight the App you want to open and press **OK**. To exit an App, press the **EXIT** button.

Apps, even those from the same provider such as the BBC, all work slightly differently, and can be updated and changed by the provider at any time. To get you started, here is some basic help for iPlayer and YouTube that is correct at the time of printing.

For further assistance, please visit our website ([www.manhattan-tv.com](http://www.manhattan-tv.com)) or the provider of the App.

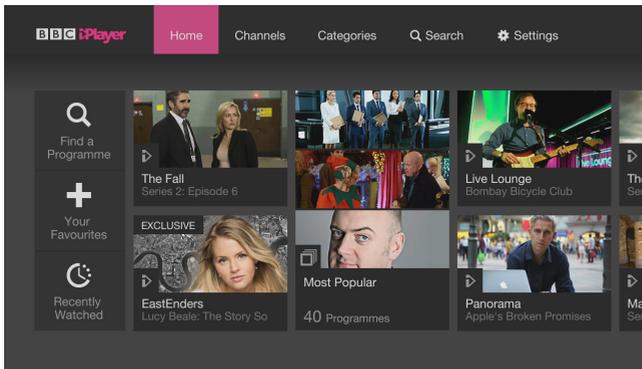

## iPlayer – Navigating & selecting a programme or option

1. iPlayer's sections are displayed across the top. Choose a section by pressing the **<&>** buttons to highlight it in pink & then press **▼** to move to the programmes & options below.
2. To view a programme or select an option, use the **<&>** buttons to highlight it and then press **OK**.



## iPlayer – Playback


1. Press **OK** to display the controls, options & playback bar at the bottom of the screen with the pause icon highlighted in pink.
2. Press **OK** to pause and press it again to resume playback.
3. To fast forward or rewind, press **▼** to highlight the playback bar and then press **>** to fast forward or **<** to rewind. Press **>** or **<** multiple times to increase the speed. When ready to resume, press **▲**.

## YouTube - Using your smartphone or tablet to control the Plaza HD-T2

When using the YouTube App on a smartphone or tablet that is connected to the same network as the Plaza HD-T2, the “Send to TV” icon will be displayed (the exact position will vary depending on the device).


If you tap this icon, videos will playback via the Plaza HD-T2 on your TV instead of your device and you can use the video controls on your device to play, pause, stop or seek within the video.

Please note that if using an iPhone, you may need to install YouTube first from the App Store.

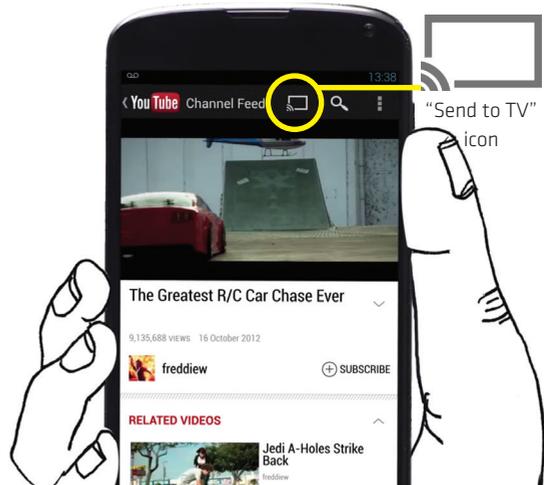


## YouTube - Browsing & playing a video

1. Press **⏪** to show the sidebar containing YouTube's channels & options. Choose a channel by pressing the **▲** & **▼** buttons to highlight it in white & then press **OK**.
2. The “Subscribe” button will be highlighted in white and videos categorised in rows below. Press **▼** & **▲** to navigate between categories and **▶** & **◀** to browse videos in that category.
3. Press **OK** to play a highlighted video.

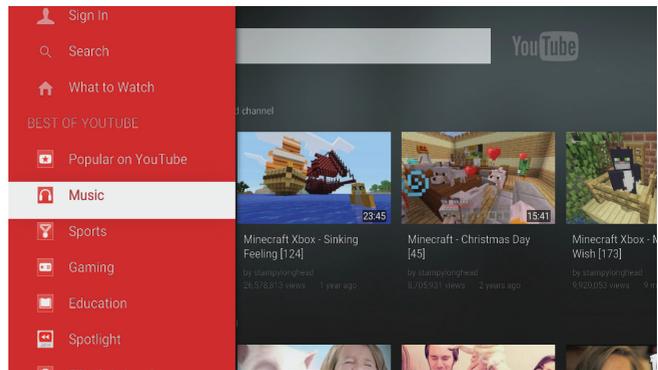

## YouTube - Playback

1. Press **OK** to display the controls, options and playback progress bar at the bottom of the screen with the pause icon highlighted in white.
2. To use a control or option, press the **◀** or **▶** buttons to highlight it in white and then press **OK**.

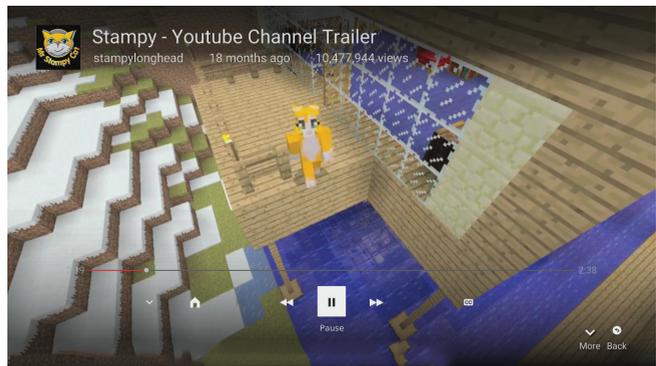

# Manhattan

## Plaza HD • T2 Remote Control

 Standby - switches the receiver on and off.

 Mute - silences the receiver's sound.

**0, 1 ... 9** - buttons to directly select channels and enter numeric values in the set-up menus.

 Switches back to the last channel watched.

 Displays your favourites lists.

**MENU** Displays the main menu screen.


 Displays channel and programme information.

 Up, down, left, right - move the highlight bar in menus and in the programme guide, and allow you to browse the channels and programmes.

**OK** Selects the option in a menu.

**LIST** Displays the channel list.

**GUIDE** Displays the programme guide.

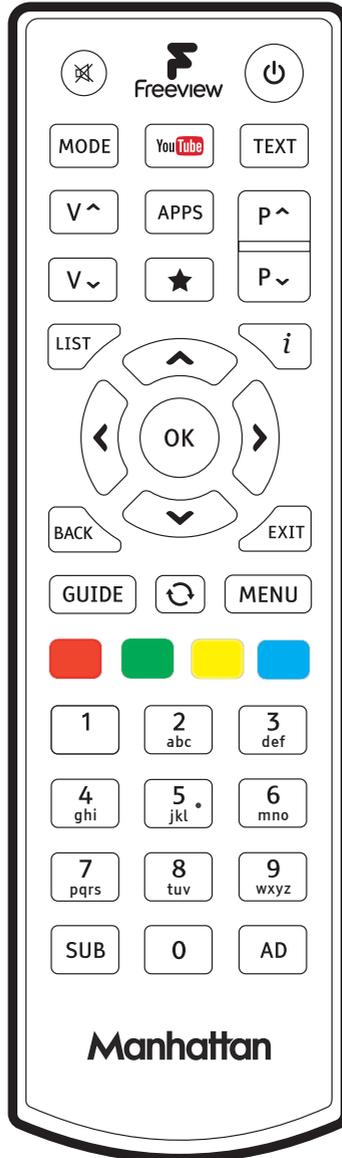

**BACK** Exits a menu and returns to the main menu.

**EXIT** Exits a menu and returns to normal TV viewing.

 Opens YouTube.

**APPS** Open Apps menu.

**V ^** Turns the volume up.

**V v** Turns the volume down.

**P ^ P v** Switches to the next or previous channel. Moves one page up or down in the channel list.

**AD** Turns on or off audio description.

**MODE** Switches between available screen display modes.

**SUB** Turns on or off subtitles.

**TEXT** Displays interactive and digital text services (where available).



Chooses options within menus.