

Manhattan

Manhattan T3•R v1.07 USB Update Guide


You need a USB stick formatted with the [FAT32](#) filesystem and [128MB](#) of free space. Many sticks will be formatted with [FAT32](#) out of the box. However, if necessary please see formatting instructions for [Windows](#) on [page 2](#) and [Mac](#) on [page 3](#). We have occasionally found some USB sticks to be incompatible with the T3•R. If a stick isn't recognised, please try another one.

1. Use your computer to unzip the downloaded file [Manhattan_T3-R_v1.07.zip](#) and extract the folder [Manhattan T3-R v1.07](#).
2. The folder contains the release notes and two upgrade files:
Copy [autoupgrade.cfg](#) and [Manhattan_T3-R_1.07_0083.usb](#) to the root of the USB stick.




3. Connect the USB stick to the USB port on the back of the T3•R and wait a few seconds for the USB Update Detected screen to be shown.

Press OK to select **Install Update**.

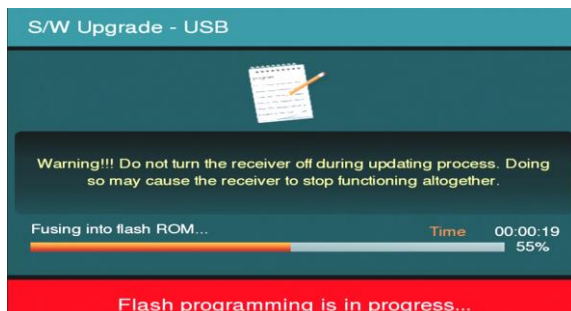


4. The T3•R will reboot and display the S/W Upgrade – USB screen.

IMPORTANT: Please DO NOT turn off the power to your T3 during the update.

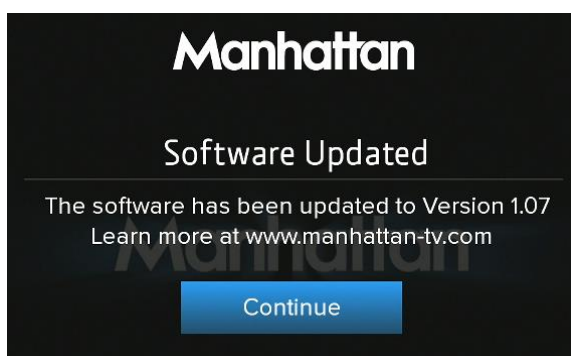

5. After the update is complete the T3•R will automatically reboot. The [Software Updated](#) screen will be shown along with the updated version [1.07](#)

Press OK to continue.

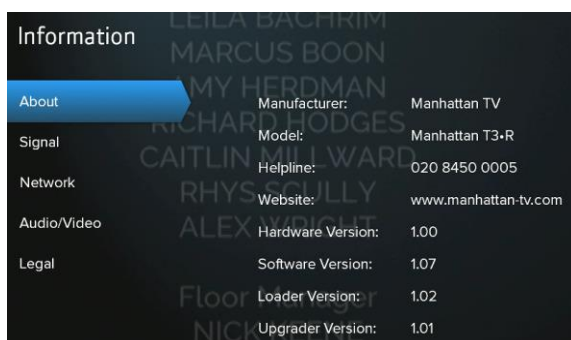

Tip: After updating you can also check the software version by pressing [HOME](#) and selecting: [Settings > Information](#).

How to Format a USB stick for FAT32 using Windows

1. Connect the USB stick to the computer.
2. Open the [Computer](#) or [This PC](#) window, depending on your OS version.
 - **Windows Vista and Windows 7:**
 - Click [Start](#)
 - Click [Computer](#)
 - **Windows 8/8.1:**
 - Type [Computer](#) in the search area from the Start screen
 - Tap or click [Computer](#)
 - **Windows 10:**
 - Type [This PC](#) in the search area from the [Start](#) screen
 - Tap or click [This PC](#)
3. In the [Computer](#) or [This PC](#) window, right-click USB stick's drive icon.
4. From the menu, click [Format...](#)

WARNING: Formatting the USB storage device will delete all content on the device.
5. In the [Format device name \(drive letter\)](#) window, under [File system](#), click the drop-down arrow, select [FAT32](#) and then click [Start](#).
6. At the [WARNING...](#) message, click [OK](#) to continue.
7. At the [Format Complete](#) message, click [OK](#).

How to Format a USB stick for FAT32 using Mac

1. Connect the USB stick to the computer.
2. Browse or search for the [Disk Utility](#) application.
 - To browse to it:
 - Open the [Applications](#) folder.
 - Open the [Utilities](#) folder.
 - Open the [Disk Utility](#) application.
 - To search for it:
 - Click the [magnifying glass](#) icon in the top right of your Mac's screen
3. Click to select the USB stick in the left panel.
4. Click the [Erase](#) button.
5. In the [Format](#) selection box, click [MS-DOS \(FAT\)](#).

NOTE: If you see a [MS-DOS \(FAT32\)](#) option that is 'greyed out' this is just to inform you of how the stick is currently formatted. You shouldn't need to format the stick but if you've had a problem with it then it is worth trying.
6. Click [Erase](#).

WARNING: Erasing the USB device will delete all content on the device.