

Manhattan


Manhattan T3•R v2.07 USB Update Guide

You need a USB stick formatted with the [FAT32](#) filesystem and [128MB](#) of free space. Many sticks will be formatted with [FAT32](#) out of the box. However, if necessary, please see formatting instructions for [Windows](#) and [Mac](#) on [page 2](#). We have occasionally found some USB sticks to be incompatible with the T3•R. If a USB stick isn't recognised, please try another.

1. Use your computer to unzip the downloaded file [Manhattan_T3-R_v2.07.zip](#) and extract the folder [Manhattan_T3-R_v2.07](#).
2. The folder contains two upgrade files: [autoupgrade.cfg](#) and [Manhattan_T3-R_2.07.usb](#). Copy these files to the root of the USB stick.



3. Connect the USB stick to the USB port on the back of the box and wait few seconds for the **USB Update Detected** screen to be shown.
Press OK to select **Install Update**.

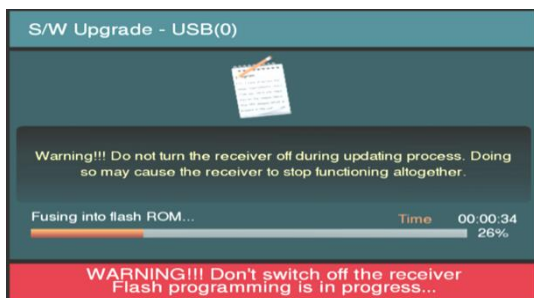

4. The box will reboot and display the **S/W Upgrade** screen.

IMPORTANT: During upgrading please DO NOT turn off the power to your box.



5. After the upgrade is completed, the box will automatically reboot and display the **Software Updated** screen along with the updated version [2.07](#)

Disconnect the USB and then press OK to continue.



Tip: After upgrading you can also check the software version by pressing [HOME](#) and selecting: [Settings](#) → [Information](#).

How to Format a USB stick for FAT32 using Windows

1. Connect the USB stick to the computer.
2. Open the [Computer](#) or [This PC](#) window, depending on your OS version.
 - **Windows Vista and Windows 7:**
 - Click [Start](#)
 - Click [Computer](#)
 - **Windows 8/8.1:**
 - Type [Computer](#) in the search area from the Start screen
 - Tap or click [Computer](#)
 - **Windows 10:**
 - Type [This PC](#) in the search area from the [Start](#) screen
 - Tap or click [This PC](#)
3. In the [Computer](#) or [This PC](#) window, right-click USB stick's drive icon.
4. From the menu, click [Format...](#)

WARNING: Formatting the USB storage device will delete all content on the device.
5. In the [Format device name \(drive letter\)](#) window, [under File system](#), click the drop-down arrow, select [FAT32](#) and then click [Start](#).
6. At the [WARNING...](#) message, click [OK](#) to continue.
7. At the [Format Complete](#) message, click [OK](#).

How to Format a USB stick for FAT32 using Mac

1. Connect the USB stick to the computer.
2. Browse or search for the [Disk Utility](#) application.
 - To browse to it:
 - Open the [Applications](#) folder.
 - Open the [Utilities](#) folder.
 - Open the [Disk Utility](#) application.
 - To search for it:
 - Click the [magnifying glass](#) icon in the top right of your Mac's screen
3. Click to select the USB stick in the left panel.
4. Click the [Erase](#) button.
5. In the [Format](#) selection box, click [MS-DOS \(FAT\)](#).

NOTE: If you see a [MS-DOS \(FAT32\)](#) option that is 'greyed out' this is just to inform you of how the stick is currently formatted. You shouldn't need to format the stick but if you've had a problem with it then it is worth trying.

6. Click [Erase](#).

WARNING: Erasing the USB device will delete all content on the device.